


IMPACT FABRIC DISPLAY - Set Up Instructions

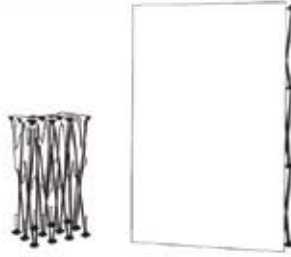

1
Remove frame and graphic from nylon bag.



2
Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.



3
Lock all hooks between front and back hubs.




4
Adjust leveling feet for desired angle. Ready pop display can now easily be moved into position.




5 OPTIONAL
Attach lights to top of frame by sliding the plastic "x blocks" under the frames cross sections.

Warning: To avoid damage, separate end caps & disconnect ALL hooks before collapsing the frame.


How to install or replace graphics on your OneFabric:

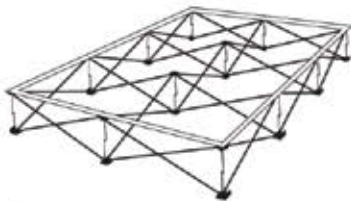

1
Assemble frame and lay flat on its back. Remove existing graphic.

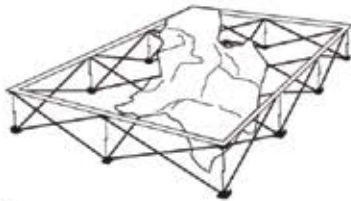

2
Starting at one corner, attach velcro on the graphic to velcro on the frame. NOTE: Velcro on the graphic should extend approx. 1/4" - 1/2" beyond velcro on the frame (it should not be flush).

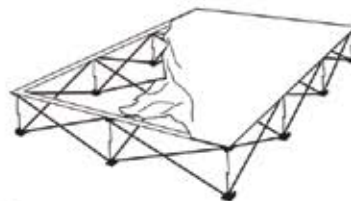

3
Working in a continuous direction around the frame, attach the rest of the graphic. Make sure the graphic is pulled taut while attaching the velcro.



4
If needed, adjust velcro for taut fit.